
— PROPRIETARY —
THIS DOCUMENT CONTAINS CONFIDENTIAL, PROPRIETARY INFORMATION THAT IS FOX PROPERTY. DO NOT DISCLOSE TO OR DUPLICATE FOR OTHERS EXCEPT AS AUTHORIZED BY FOX.

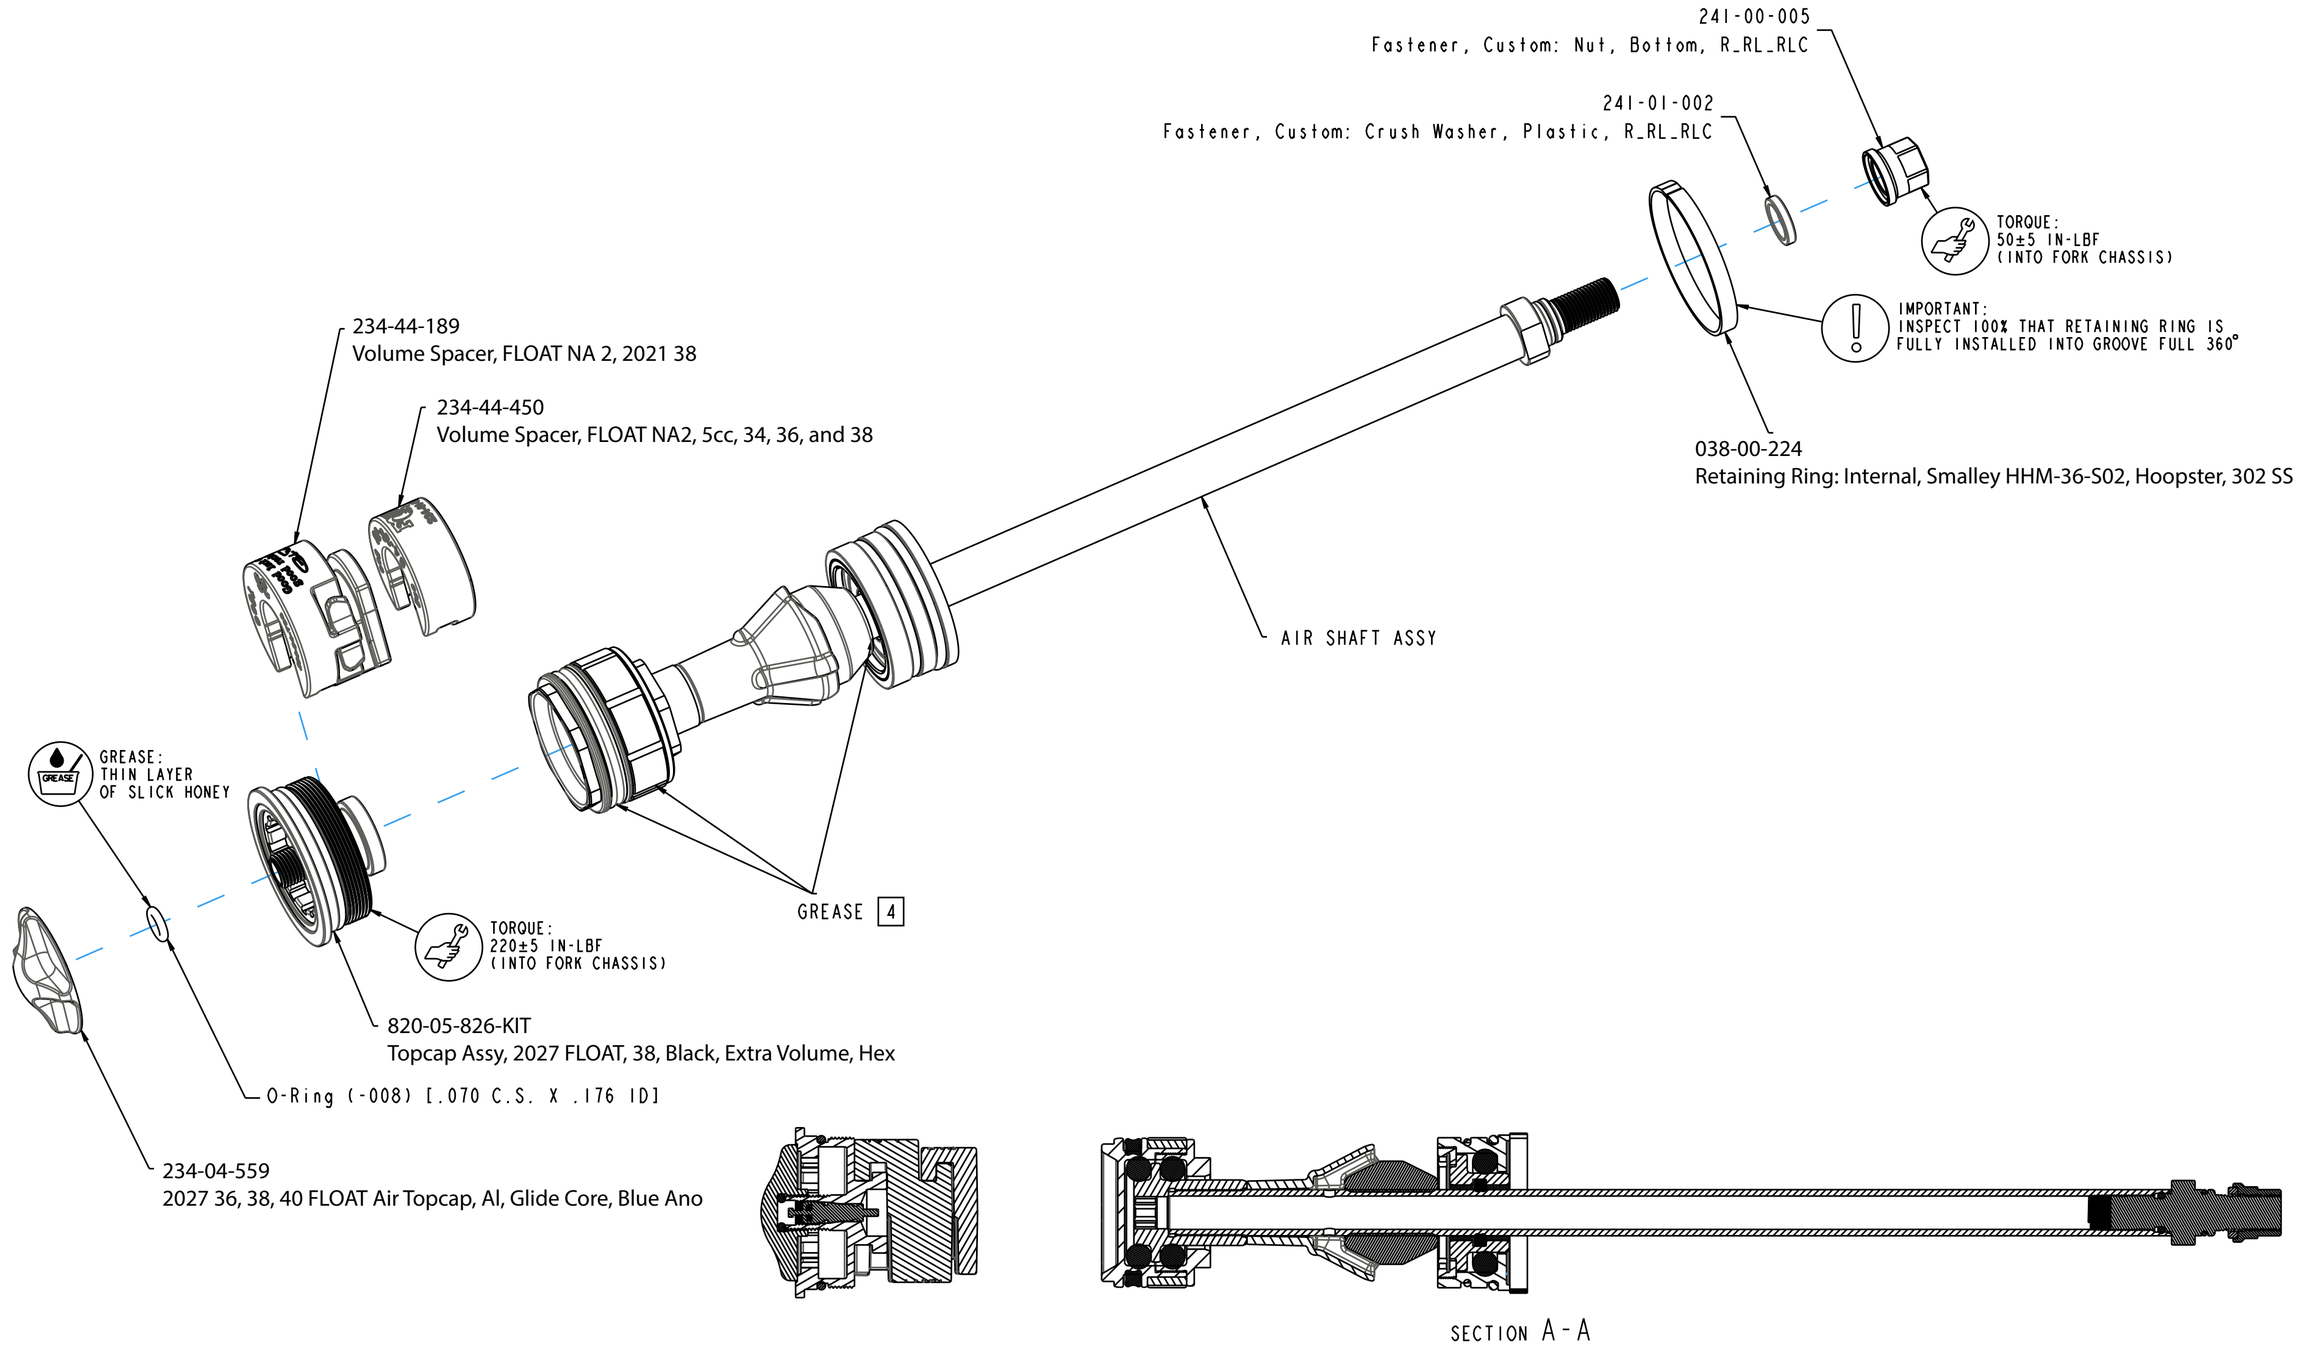

SECTION A-A

4 APPLY GREASE AROUND PISTON AND GLIDE BAND, ON AIR SHAFT, BETWEEN BUMPER AND NEG PLATE, AND A THIN LAYER ON ENTIRE LENGTH OF PISTON BORE OF UPPER TUBE ID.

5. PRESSURIZE AIR SPRING BEFORE INSTALLING LOWER LEG.

FOX Factory, Inc.
2055 Sugarloaf Circle, Suite 300
Duluth, Ga 30097 USA Phone 800-369-7469

TITLE: Air Spring Assy, 2027 38 FLOAT NA3, F-S, P-Se, & P-S (1.345" Bore)

SIZE	DWG. NO.	REV
C		B

PLOT SCALE: 1:1 | SHEET: 1 OF 1