


4

3


2

1

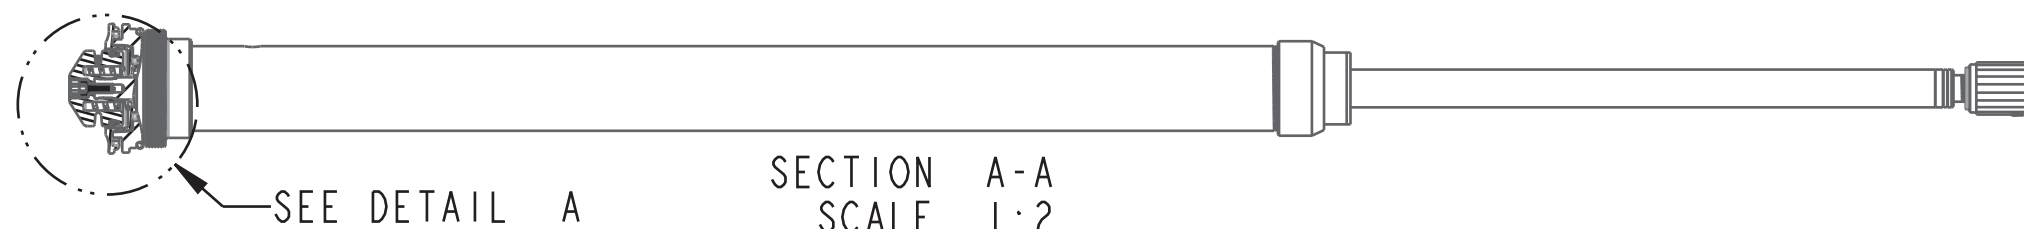


4 PTL

1 PTL

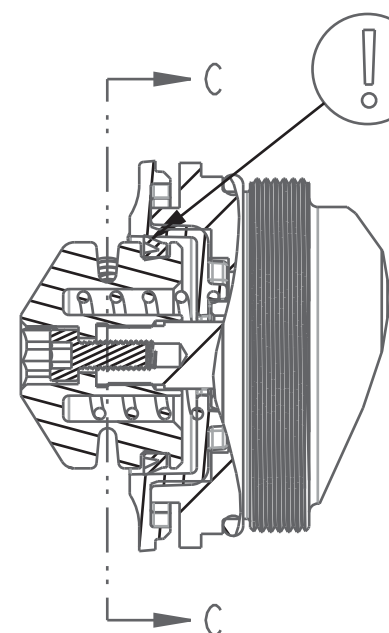PUSH-TO-LOCK  
SECTION C-CDETAIL A  
SCALE 3:2IMPORTANT:  
NOTE SEAL ORIENTATION

Fastener, Standard: Screw [#8-32 X 0.250 TLG]

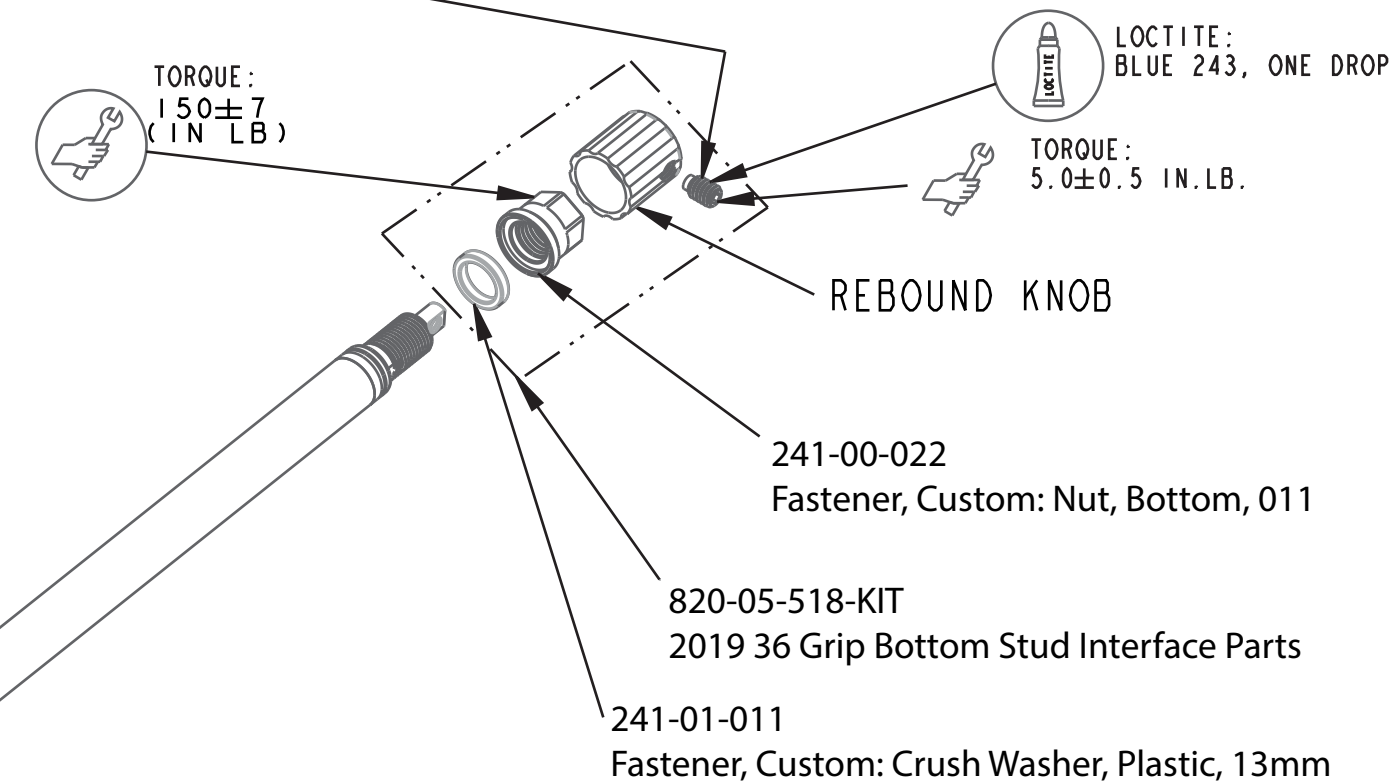

TOPCAP INTERFACE PARTS INSTALL NOTES:

PUSH-TO-LOCK (PTL):

- 1 PTL SUB-ASSEMBLE TOPCAP INTERFACE PARTS WITH PULLEY SET SCREW FACING THE DOT OPPOSITE THE ARROW.
2. INSTALL 1 PTL SUB-ASSY TO DAMPER WITH ARROW FACING DESIRED DIRECTION FOR CABLE ROUTING. TIGHTEN SCREW 2-3 TURNS (DO NOT RUN DOWN).
3. ROTATE ENTIRE SUB-ASSY  $270^\circ$  CCW AFTER INSTALLING. CHECK CABLE DIRECTION. TORQUE SCREW WHILE HOLDING PULLEY
- 4 PTL WHEN LOCKED OUT (ADD 5-6 IN-LB CW TORQUE TO PULLEY), SET SCREW MUST BE ALIGNED TO MARK  $\pm 20^\circ$ .
5. PULLEY MUST RETURN FREELY AFTER LOCKOUT (FROM FORCE OF TORSION SPRING ALONE).

TORQUE: PUSH-TO-LOCK:  
NEEDLE TO  $2.0 \pm .15$  IN-LB BEFORE  
INSTALLING TOPCAP INTERFACE PARTS  
(SAME TORQUE FOR CARTRIDGE DYNO)

2026 36SL 140 MAX, Grip Remote Cart Assy

REFERENCE ONLY  
(FOR INSTALLATION  
INTO FORK)TORQUE:  
 $220 \pm 5$  IN.LB.

Housing, Remote, Hubless, 2020 Grip PTL, Plastic

820-05-611-KIT  
2020 Grip Push-Lock Remote, Topcap Interface Parts

Spring: Torsion, Remote, 2020 Grip PTL, LH Wound

GREASE:  
THIN LAYER LT2 GREASE  
ID AND OD

Seals: U-Cup, Shore 70A, 2013 CTD-ADJ, Remote Fit-CTD and Remote O/C-CTD

Fastener: Custom (Metric): Set Screw [M4 x .7mm x 3mm] SST, Patchlock

Cable Pulley Remote, 2020 GRIP

Fastener Standard (Metric): Screw [M2.5X8mm] Socket Head Cap, SS

- PROPRIETARY -  
THIS DOCUMENT CONTAINS CONFIDENTIAL, PROPRIETARY INFORMATION  
THAT IS FOX PROPERTY. DO NOT DISCLOSE TO OR DUPLICATE  
FOR OTHERS EXCEPT AS AUTHORIZED BY FOX.**FOX** **FOX Factory, Inc.**  
130 Hangar Way, Watsonville, CA 95076 USA  
Ph 831-768-1100  
Fax 831-768-9312TITLE  
**2026 36SL 140 MAX, Grip PTL  
Remote Cart Assy Complete**SIZE DWG. NO.  
**C 820-18-601-KIT**

PLOT SCALE ~1:1 SHEET 1 OF 1

ProE ASSEM